


1. Tape the tech box to a flat spot on the back of the board.
2. Measure 2 lengths with a rope (SEE PICTURE): From the rear edge of the mast, along the board, up to the position of the battery box (length X) and from the motor up the mast to the bottom of the board (length Y). Route the cable as close as possible to the board and mast so that the cable is flush with the components after installation. Aide: 20-25 cm from the board is the optimal position for the motor to provide support and stick out of the water once fouled.
3. Add length X and Y and specify the total when ordering. (It is best to choose a longer length as you can always wind up excess cable when it is not needed).

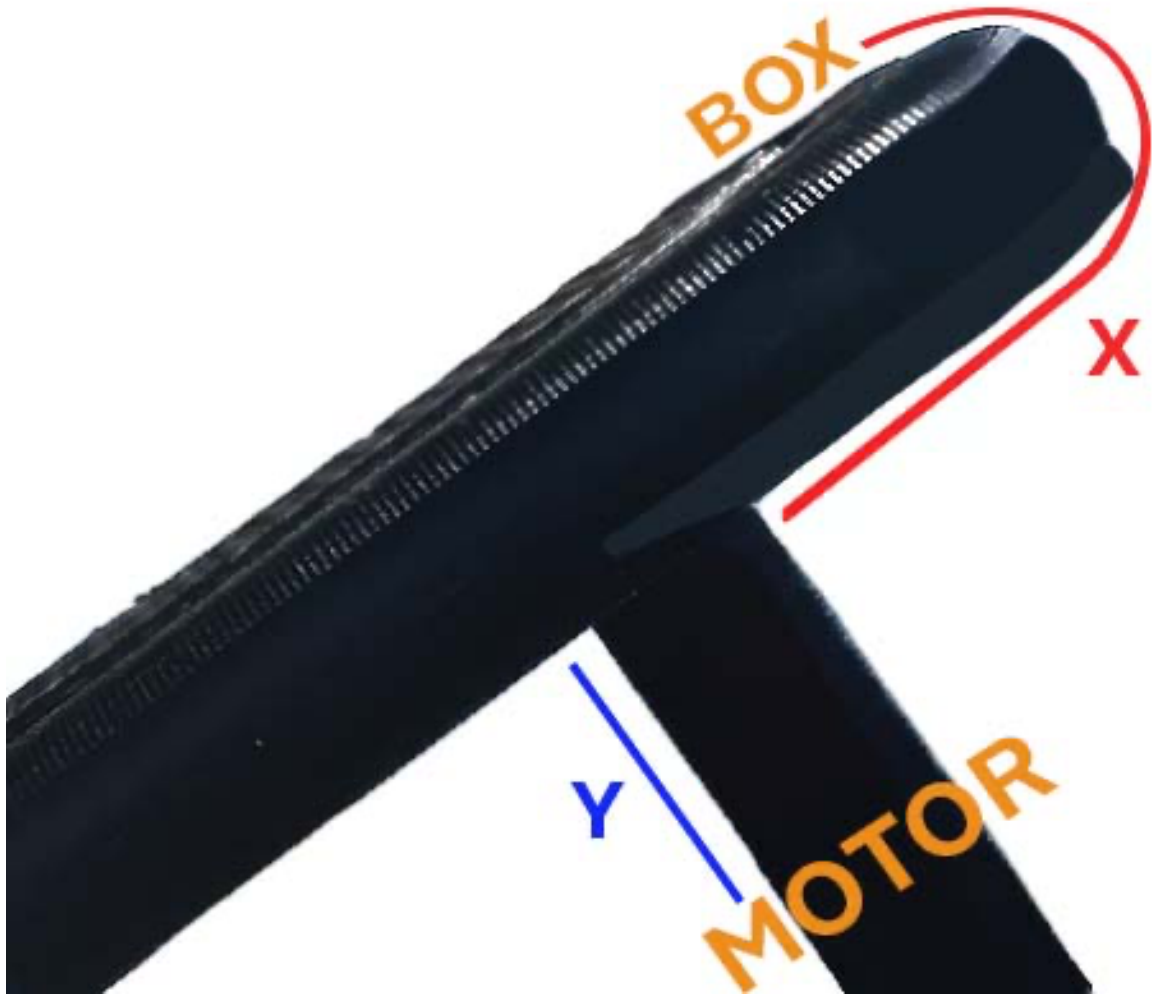

EASY
DRIVE